EASIEST WAY TO PUT ON LADDER CHAINS – With Cams


Pull off the highway to a safe place before installing or removing tyre chains




Lay chains out flat, remove all tangles. When chains are placed on the tyre, the cross hook eyes must face up (see the insert). Damage to your tyres could result if these hooks face against the tyre.



Lay chain over the tyre, cross chain hooks up and the Cam fasteners on the outside of the tyre. Tuck the spare length of chain under the tyre.

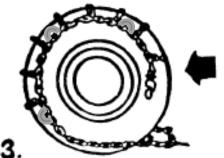

Move car until the chain end is axle high (move a 1/3 of a turn).

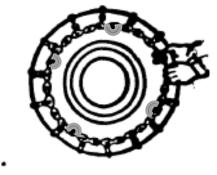

Hook inside fastener first*.
HINT:- Push across the top chains to the inside, hook on to tightest link then pull back till even. Remove slack and hook the outside fastener to the tightest link. Tighten Cam Fasteners. Drive forward about 10 metres, stop and check if tight enough. If necessary, open Cams and repeat this step hooking onto next closer chain link etc.

NOTES:

Re-tighten chains when slack occurs. Maintain a tight snug fit throughout use. Adjust periodically to keep cross chains "straight" across the tyre tread.

*Brand new chains may need to be trimmed on the first fit-up.